
## **Spare Parts List and Sectional Drawings**

1 3 5 7 8 10 11 12 16 19 20	Front shaft Rear flange Bearing housing complete w/geared rim Bearing housing rear side Gearbox Terminal box - bottom part Terminal box cover Shell Rear shaft Input wheel Output pinion Geared rim	53 53.1 55 56 63 64 65-70 71 73 74 84	Cable side nipple (cable option) Nipple (terminal box) Spacer bushing Spacer bushing Ball bearing Needle bearing Ball bearing Inner race Locking ring Locking ring	110 111 113 114 115 126 127 131 132 136 138	Screw Screw Screw Socket set screw Oil plug with magnet Key Key Key Key O-ring/Rubber seal Rubber seal Gresse ningle
19	Input wheel	74	Locking ring	136	O-ring/Rubber seal
22 23 24 31	Geared rim Intermediate pinion shaft Intermediate wheel Labyrinth seal cover	86 93 102 103	Locking ring Elbow or straight connector Screw Screw	139 140 142 143	Grease nipple Deflection seal Double lip seal O-ring

## 138LS Standard: 2 stage gearbox with terminal box

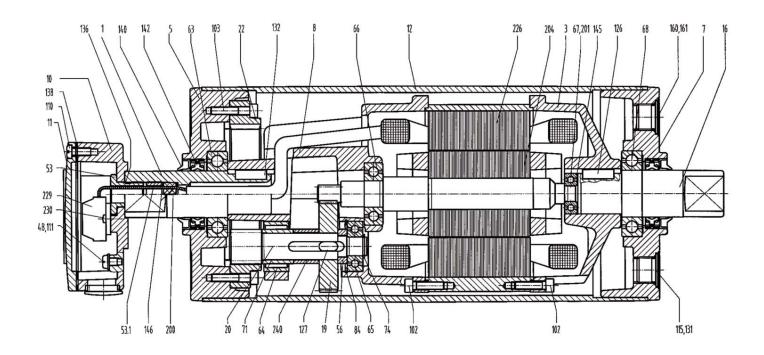

## **Motorized Pulley 138LS**



Ø 5.45 in. (138 mm), with helical steel gearbox

## Spare Parts List and Sectional Drawings (cont.)

145	Distance washer	161	O-ring	210	Fixing guard
146	Washer	163	O-ring	223	Cable
148	Washer	167	Screw	226	Stator complete
150	Electromagnetic brake	200	Rubber seal	229	WAGO clamp terminals
150.1	Friction disc	201	Encoder (if applicable)	230	Fixing bolts
156	Rectifier (not shown)	204	Rotor complete with pinion	240	Distance ring
160	Oil plug	208	Stainless steel cover gear end		S .

