
 


Low Voltage with Brake Option

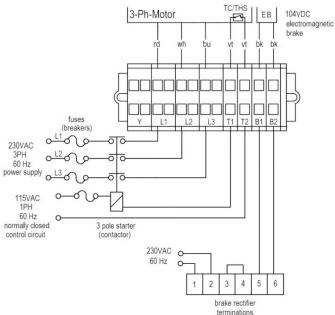

Assembly instructions




Push in wire




NOTE:

Brake rectifier is shown with jumper across terminals 3 & 4. This enables AC power supply to rectifier to stop and start brake. Brake responsiveness may be improved by connecting an external switch to terminals 3 & 4.

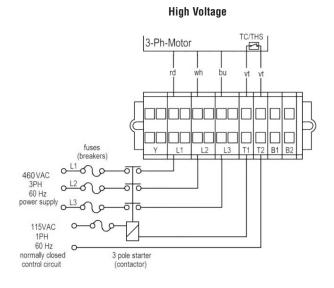

High Voltage with Brake Option

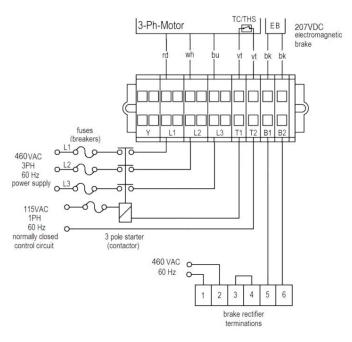

Push down clamp