


113LS Connection Diagrams

Terminal Box - 3 Phase - European Motor

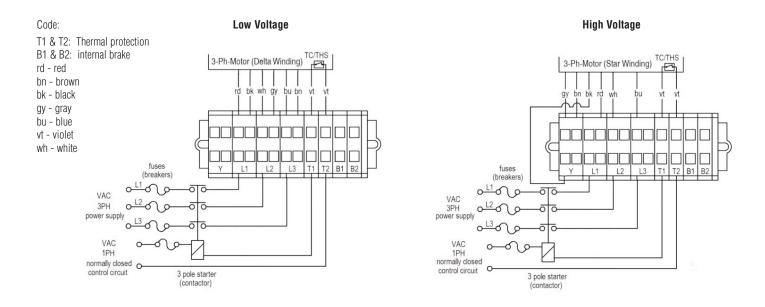


Low Voltage With Brake Option

Push down clamp

Push in wire

High Voltage With Brake Option

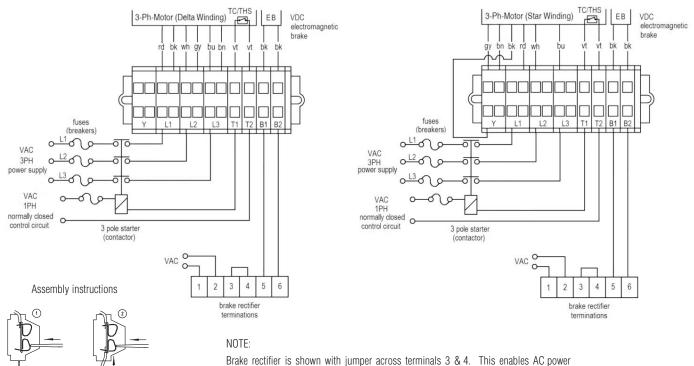

connecting an external switch to terminals 3 & 4.

supply to rectifier to stop and start brake. Brake responsiveness may be improved by