

## **Spare Parts List and Sectional Drawings**

1	Shaft cap (rear)	14	Wavey washer	27	Tywrap
2	Set screw	15	Flat washer	28	O-ring
3	Ball bearing	16	Planet gear (short)	29	Set screw
4	O-ring	17	Circlips	30	Compression seal
5	Oil seal	18	Ball bearing	31	Straight connector
6	Ring gear	19	Stator housing	32	End housing
7	Gear holder	20	Rotor	33	Shell
8	Roll pin	21	Stator	34	Shaft
9	Planet gear (long)	22	Stator housing	35	Rotor journal bearing
10	Planet gear (short)	23	Stator bolt	36	Rotor shaft
11	Sun gear (long)	24	Nut	37	Shaft cap (front)
12	Sun gear (short)	25	Rivet	38	Power cord
13	Gear carrier	26	Dowel pin	39	X-ring

## **80LP Standard:**

